

STAINLESS STEEL WARDROBE LOCKER ASSEMBLY INSTRUCTIONS

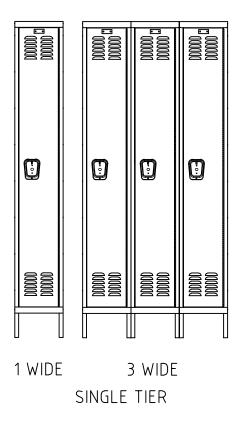

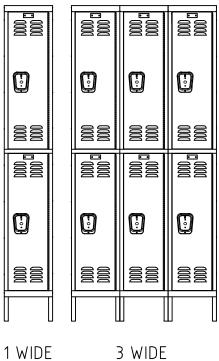

1 WIDE 3 WID

DOUBLE TIER

General Instructions

- 1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
- 2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
- 3. Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.
- 5. Items with suffix (xx) are available options.

CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.

FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.



www.Hallowell-List.com

Phone (866) 566-0500

STAINLESS STEEL WARDROBE LOCKER ASSEMBLY INSTRUCTIONS

PACKAGE CONTENTS							
REF. NO.	DESCRIPTION	PART NO.	1-WIDE 0 1-TIER	UANTITY 2-TIER	3-WIDE (1-TIER	QUANTITY 2-TIER	
1	REAR PANEL	KRww72SS	1	1	3	3	
2	RIGHT/LEFT SIDE PANEL	KP1872SS	2	2	4	4	
3	TOP/BOTTOM SHELF	KSww18SS	2	3	6	9	
4	HAT SHELF	KHww18SS	1	_	3	_	
(5)	SINGLE CEILING HOOK	H5K-SS	2	4	6	12	
6	DOUBLE CEILING HOOK	H7K-SS	1	2	3	6	
××(7)	COAT ROD BRACKET	TRH200	2	4	6	12	
××®	COAT ROD	KCRww	1	2	3	6	
9	DOOR FRAME ASSEMBLY	KDHFww78-†LV-SS	1	1	3	3	
× 10	DOOR	KDHww72-tLV-SS	1	2	3	6	
×(1)	RECESSED HANDLE S.S.	TBECK2	1	2	3	6	
× (12)	LOCK CHANNEL	KLhh-tSS	1	2	3	6	
×13	CHANNEL STOP	CS002	2	4	6	12	
× (14)	NYLON LATCH	DLB100B	2	4	6	12	
×15	SPRING	LS100	2	4	6	12	
×16	LOCK BRACKET	SLB101L-SS	1	2	3	6	Single Tier
× (17)	PLASTIC LIFTER	LC100B	1	2	3	6	KD Locker
18	REAR LEG	KLG-SS	2	2	2	2	ND Locker
×19	BUMPER	KDB300	3	4	9	12	
20	NUMBER PLATE	NPH	1	2	3	6	DART MUMBER CHEEN CHOLIC
21)	NUMBER PLATE RIVET	RV101SS	2	4	6	12	PART NUMBER SUFFIX SHOWS WIDTH, DEPTH, HEIGHT AND TIER.
22	3/8" SLOTLESS BOLT	MBT200SS	62	74	134	166	CUSTOMER TO SPECIFY.
23	HEX NUT	N201SS	60	70	128	154	
24	ESCUTCHEON PLATE	RPE100SS	1	2	3	6	
25	HI-DOME CAP NUT	N110SS	2	4	6	12	
×26	RIVET (HANDLE)	RV102SS	1	2	3	6	
×27	RIVET (HINGE)	RV102SS	7	8	21	24	

NOTE:

FOR OPTIONAL INDIVIDUAL SLOPE TOPS, SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KIST-B

FOR OPTIONAL 6" HIGH CLOSED METAL BASE, SEE SUPPLEMENTAL INSTRUCTION SHEET NO. ASY-H-KCFB

- × SHIPS PRE-HUNG IN DOOR FRAME ASSEMBLY (9)
- ×× OPTIONAL ITEM

PART NO. LEGEND:

ww = WIDTH

dd = DEPTH

hh = HEIGHT (FRAME)

t = TIER

TOOLS REQUIRED: 3/8" NUT DRIVER (3/8" SOCKET MAY BE SUBSTITUTED)

TWO-YFAR WARRANTY

HALLOWELL K.D. LOCKERS ARE COVERED AGAINST ALL DEFECTS IN MATERIALS AND WORKMANSHIP EXCLUDING FINISH, DAMAGE RESULTING FROM DELIBERATE DESTRUCTION AND VANDALISM FOR A PERIOD OF TWO YEARS.



STAINLESS STEEL WARDROBE LOCKER ASSEMBLY INSTRUCTIONS 9 10 6 8xx)& xx/ (11**์**18 18 SIDE PANELS MUST GO INSIDE REAR PANEL AND INSIDE FRAME.

COAT ROD (KCRww) & COAT ROD BRACKETS (TRH 200) ARE OPTIONAL.

HALLOWELL MAKES EVERY EFFORT TO ENSURE THAT ALL UNITS SHIP COMPLETE; HOWEVER, SHOULD YOUR UNIT CONTAIN MISSING OR DAMAGED PARTS, REPLACEMENTS MAY BE OBTAINED FROM HALLOWELL. TO OBTAIN PARTS, FOLLOW THESE INSTRUCTIONS.

PLEASE PROVIDE THE FOLLOW INFORMATION:

FOR 12" WIDE SHELVES ONLY USE PROVIDED MIDDLE

HOLES FOR FASTENING. (ALL ITEMS ③ KS SHELF)

MODEL NUMBER

DESCRIPTION OF PART(S) NEEDED & PART NUMBER(S) AS SHOWN IN PARTS LIST COLOR PURCHASE DATE
COMPANY NAME & CONTACT PERSON

WHERE THE PRODUCT WAS PURCHASED FROM

IF REQUESTING PARTS BY TELEPHONE, ASK FOR CUSTOMER SERVICE & PROVIDE THE ABOVE INFORMATION.



FOLLOW BASIC INSTRUCTIONS FROM 3-WIDE ASSEMBLY

TOP VIEW FRONT

1 WIDE UNIT PLAN VIEW

PREMIUM K.D. WARDROBE STOCK LOCKER ASSEMBLY INSTRUCTIONS (A GROUPING OF 3-WIDE SINGLE TIER LOCKERS ILLUSTRATED) STD SINGLE HOOK (2)RIGHT / LEFT LOCATION (1 FASTENER SIDE PER HOOK) STEP 1 SIDE HOLES FOR STEP 2 LAY REAR PANELS OPTIONAL ADDITIONAL BOLT KP (2) SIDE PANELS SIDE BY SIDE. HOOKS. TO KR (1) REAR PANELS. (1)KR – REAR PANEL SIDE PANELS (2) NEVER FIT BETWEEN KR 1 REAR STEP 3 PANEL FLANGES. KS - SHELF INSTALL DOUBLE CEILING 4 KH - HAT SHELF HOOK (H7K) 6 AND SINGLE (3) CEILING HOOKS (H5K) (5) 3 KS - SHELF TO (KH) (4) HAT SHELF. STEP 5 BOLT DOOR AND FRAME (9) ASSEMBLIES TO KS 3 SHELVES AND KP 2 SIDE PANELS. STAND UNIT UP AND ALIGN LOCKER TOPS EVENLY. TIGHTEN ALL LEGS (18) TO BE AT 36" INTERVALS BOLTS AND NUTS. INSTALL KS ③ SHELVES AND KH ④ SHELVES TO UNIT. NOTE: WHEN BOLTING ONE UNIT TO ANOTHER, OMIT ONE SET OF BOLTS INSTALL TWO KLG (18) REAR IN END FRAME AND SIDE TO MINIMIZE LEGS TO INSIDE OF SIDE (2) AND REAR GROWTH FROM BOLT HEADS. PANEL (1) BY SLIDING INTO PLACE FROM BOTTOM. LOCK (12) CHANNEL ASSEMBLY OF SINGLE ROW LOCKERS **NEVER PUT SIDE PANELS BETWEEN** (16)(15) (14A) FRAMES OR REAR PANELS. LOCK BRACKET SIDE PANELS MUST SPRING ASSEMBLY SLB101L LATCH SPRING GO INSIDE REAR LS100 ASSEMBLY DLS100 PANEL AND INSIDE FRAME. (13) PLASTIC CHANNEL NYLON LATCH DLB100B STOP CS002 (14) (17) LIFTER SINGLE TIER EXAMPLE - 3 WIDE UNIT PLAN VIEW (16) EXPLODED VIEW OF LOCK CHANNEL LOCK BRACKET 25 HI-DOME NUT (9) OPTIONAL COAT ROD SLOTLESS (11)BRACKETS TO BE BOLTED TO UNDERSIDE BOLT ESCUTCHEON PLATE RECESSED HANDLE WITH OF HAT SHELF WITH COAT ROD IN BETWEEN. (22) **ESCUTCHEON PLATE** ××① COAT ROD BRACKETS (××TRH 200) (24)(11) RECESSED HANDLE xx(8) COAT ROD (xxKCRww) ASSEMBLY OF ESCUTCHEON PLATE (13)PLASTIC CHANNEL NUMBER 20 STOP CS002 (10) DOOR 6 DOUBLE CEILING HOOK (H7K) (5) SINGLE CEILING HOOK (H5K) TO BE BOLTED TO INSIDE DOOR VIEW TO BE BOLTED TO UNDERSIDE OF HAT SHELF. UNDERSIDE OF HAT SHELF. (21) NUMBER PLATE RIVET



ASSEMBLY OF NUMBER PLATE